

SMART TOILET

Instruction Manual

THE DESCRIPTION OF THE PRODUCT IN THIS MANUAL SHALL BE ACCURATE. IF THE CONTENT ERROR CAUSED BY TECHNICAL UPDATE OR DESIGN AND TYPESETTING IS SUBJECT TO THE ACTUAL PRODUCT. WE WOULD LIKE TO EXPRESS OUR SINCERE GRATITUDE TO YOU FOR CHOOSING OUR PRODUCTS WITHOUT PRIOR NOTICE. IN ORDER TO AVOID ACCIDENTS AND USE THIS PRODUCT SAFELY, PLEASE BE SURE TO READ THE MANUAL CAREFULLY. PLEASE KEEP THE INSTRUCTIONS IN AN ACCESSIBLE PLACE FOR SAFEKEEPING.

Instructions and installation instructions

Contents

List of functions and configurations.....	01
Important Safety Guidelines.....	02
Safety Precautions.....	03
Precautions for Use.....	07
Component Name.....	09
Description of digital display.....	09

Method of use

Confirmation before use.....	10
Hide feature Settings.....	12
Method of use	13
Information of use.....	14
Use instructions.....	17

Thank you for purchasing our products. Please read this instruction carefully and use it correctly. After reading the manual, please keep it in a place for easy access.

There are differences in various models of product modeling, product modeling please prevail in kind, the product shape of this manual is for reference only.

Cleaning and maintenance method





















Daily cleaning and maintenance.....	18
Remove cover and clean.....	19
Long-term placement when not in use.....	20
Replace the battery of the remote control.....	20

When there is a danger of freezing in winter.....21

Fault diagnosis.....22

Product specification.....23

List of Main Functions

Rinse function		Warm water from the nozzle can be thoroughly cleaned buttocks
Female function		Designed for women's daily hygiene, carefully cleaned to prevent bacterial infection.
Moving cleaning		For cleaning or female function, the nozzle can be moved back and forth to enhance the cleaning effect.
Massage function		The pressure intensity of clean water changes rhythmically, which can play a role in massage and promote blood circulation.
Cleaning position adjustment		The washing position can be adjusted forward or backward according to the user's body shape without moving the body.
Seat ring heating		The seat ring is controlled by microcomputer, which can keep a certain temperature, especially in cold winter, so it feels warm and comfortable.
Warm air drying		It can blow out warm wind and speed up the drying of buttocks after rinsing.
Intelligent deodorization		Toilet smell through a special deodorant filter, the discharge of purified gas, so as to eliminate or reduce the smell.
Softy close seat ring		Seat ring and cover are equipped with buffer devices, so that it gently fall, no "pop-pop" noise.
Intelligent induction		When people sit on the automatic perception, so that the machine is in a usable state.
Intelligent flush		Automatic flushing can be performed when the human body is seated for more than 10 seconds and left, or use dry function.
Self-cleaning nozzle		When the nozzle extends or retracts, it automatically ejects a small stream of water to clean the nozzle.
Power saving function		When not in use, there can be energy-saving mode to choose, so as to achieve the purpose of saving electricity.
Pressure regulation		The water column will be enhanced when pressing the booster button to strengthen the cleaning effort.
Instant heating		When cleaning the buttocks, heat to set temperature instantly.
Power off flush		It can flush water normally in case of power failure.
Automatic flip		When the human body is close to the front of the toilet 30CM around, the cover will automatically turn up (this function is only made for type C products).
Water stop protection		When the water is cut off in the process of use, the cleaning operation will be automatically closed to avoid the sudden rise of water temperature and scald skin.
Foot sensor flush		When you place your foot next to the sensor button under the toilet, the toilet automatically flushes once (this feature only applies to type B products).
Foot sensor flip		When you place your foot next to the sensor button under the toilet, the seat ring automatically turn up (this feature only applies to type C products).

Important Safety Guidelines

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING AND USING THE PRODUCT.
WHEN USING THIS PRODUCT, BE SURE TO FOLLOW THE SAFETY INSTRUCTIONS.

Danger—To reduce the chance of electrocution

1. Do not place the product or store it in a place where it may get wet.
2. Do not drop the remote control into the bathtub, sink or other liquids.
3. Do not spray water on the product or plug part.

Warning—To prevent the possibility of burns, electric shock, fire and injury



1. When little kids or paraplegia using this product, please adjust the temperature to the lowest setting or turn off the temperature function of the toilet seat.
2. This product is only for the function listed in this manual, do not use the ancillary equipment not recommended by our company.
3. Please do not continue to use the product in the case of damaged wiring or plug, product failure, product damage or falling into water, send the product to a nearby designated maintenance center for inspection, repair or adjustment.
4. Please make sure that the wires are not burned.
5. Do not use this product while sleepy or sleeping.
6. Do not drop or insert any item into the product opening or water pipe.
7. Do not use this product outdoors.
8. Do not allow children to play with this product
9. Use the new hose assembly supplied with this product. Do not reuse the old hose assembly.

Please save this safety guide



Safety Precautions

Please read this safety precautions carefully before correct use.
The precautions listed here are important for safety. Be sure to follow them.

The logos and meanings are as follows

 Warning	Indicates that misoperation, ignoring this sign, may result in serious injury or death.
 Attention	Indicates that misoperation may result in personal injury or property damage if the operator ignores this sign.

Examples and descriptions of ICONS

	It is not feasible to do STH. The left sign (non-detachable).
	Represents something that must be done. The left sign (must comply).

Warning



Do not pour water or detergent on the product body or the power plug

- Could cause fire or electric shock
- May cause the toilet to break, damage or indoor water seepage.

This product is an electrical product, when using it in the bathroom, please install ventilation fan or ventilation port to keep good air circulation in the bathroom.

Set the socket for power distribution as follows

- Fire or electric shock may occur if the following requirements are not followed.
 - a. Please use high sensitivity, fast leakage switch (rated induction current below 10mA) or insulation transformer (above 1.5kVA, below 3KVA) to protect the socket loop.
 - b. The installation position of socket must be apart from ground 0.3m above please, and a bit far from bath crock as far as possible.

The product ground cable must be grounded and connected to the ground cable

- Electric shock may occur if ground handling is not performed.

Note: The grounding treatment here refers to that the grounding resistance is less than 4Ω protection grounding, and the grounding cable is copper wire with a diameter of more than 1.6mm.

When used in the bathroom

Please confirm that the power plug has been waterproof with silicone

Warning



Must not privately disassemble, repair, transform the product
 • Could cause fire or electric shock



Do not continue to use the product when it is faulty
 • When the following situations occur, please pull out the power plug, close the inlet angle valve, stop the water.

The fault content...
 Leakage from piping and body
 Cracks and cracking occur in the product
 Abnormal sound, abnormal smell
 Product smoke, abnormal heat
 The toilet is blocked

• If used in a malfunctioning condition, it may cause fire, electric shock or water seepage.



Do not use loose and unstable power sockets
 • Could cause fire or electric shock



Do not use water sources other than tap water
 • It can cause dermatitis and other problems



Do not remove or insert the power plug with wet hands
 • Could cause electric shock



Do not damage power cables or connectors

Do not pull, do not process, do not heat, do not forcibly bend, do not put heavy objects on the power cord and connection line

• Fire, electric shock and short circuit may be caused if the product is still used regardless of damage.



Do not use multi-head electrical sockets

• Do not use extension wires, which may cause fire and electric shock

Warning



Attention to low temperature burns

- If you sit for a long time, please adjust the temperature of the seat ring to normal temperature.
- Please adjust the temperature of the seat ring to normal temperature and adjust the temperature of air to low when the following personnel use the seat ring and air drying.

Children and the elderly who cannot adjust the temperature to a suitable degree by themselves. The sick, the disabled and other persons with limited mobility. Take sleeping drugs (sleeping pills, cold drugs, etc.), heavy drinking and excessive fatigue sleepiness.

Warning



Do not let cigarettes and other kindling near the product.
 • it may cause fire



Do not put or block the air outlet with fingers or other objects
 • Scald, electric shock, burn may occur
 • Please be careful when using for children and the elderly



Please do not apply force or impact, do not stand on the product, do not place heavy objects
 • It may cause product cracking, body fragmentation and injury



When maintaining, please use diluted kitchen detergent (neutral), do not use the following products
 (Toilet detergent, household detergent, gasoline, aromatherapy water, nylon brush, etc.)
 • May damage the plastic, deform it or discolor it.
 • It could damage the pipes and cause water leaks.



When the inlet Angle valve is opened, the inlet filter and the water discharge cock attached to the inlet filter shall not be removed.
 • It may cause water leak.




Do not twist or damage the water inlet hose.
 • It may cause water leak.



Do not use the toilet to flush anything other than toilet paper.

• Otherwise, the toilet may be blocked. Sewage overflows.

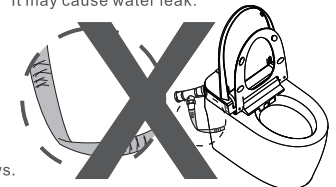

Please pull out the power plug when not in use for a long time.



When water leakage occurs, please close the inlet Angle valve and stop the water



Prevent damage caused by freezing. In winter, please keep warm and raise the temperature of the bathroom



Fasten the water inlet filter firmly when installing it.




Before use, please make sure that the power cord plug is properly inserted, and the plug is tightly fitted with the socket, and there is no loose or unsafe insertion phenomenon.



When the toilet is blocked, please pull out the power plug and dredge it with a pipe dredge.




Do not direct sunlight on the product, it will make the product discoloration, aging and deformation

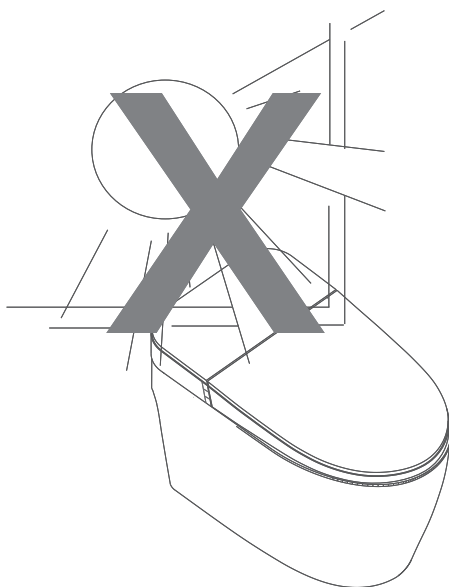

Precautions for Use

Mistakes of clean

Do not wipe the product body with coarse cloth or toilet paper

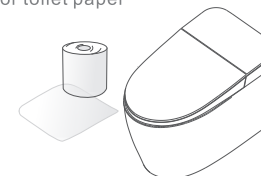


Direct washing with water is strictly prohibited




Daily maintenance

Please do not urinate on cover or nozzle

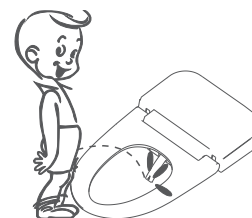

When thundering, please pull out the power plug

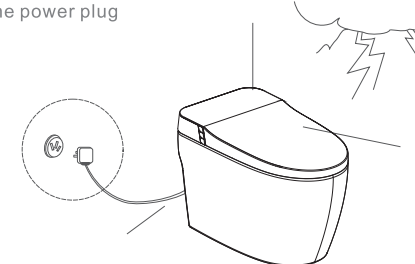

Incorrect operation/Precautions

Must not cover seat inductor, human body infrared inductor, otherwise may cause intelligent toilet misoperation.


Please stay away from the product when using the radio, otherwise it may cause noise on the radio.

When placing children's auxiliary seat on the seat circle, please take it away after use


Otherwise, some functions may be unavailable

Precautions for Use

Take anti-freezing measures at night in winter to prevent damage caused by freezing.

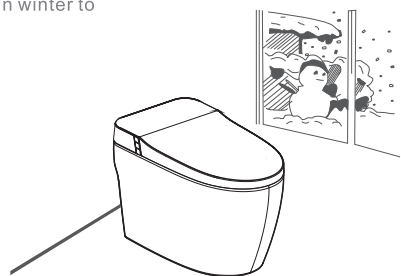


Please do not place heaters close to the product, as discoloration or malfunction may occur.

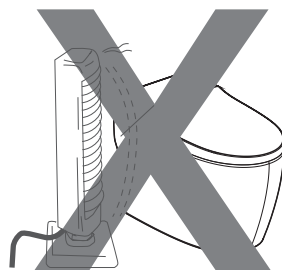

Do not open the seat or cover rudely. Cracking or malfunction may occur.



Component Name

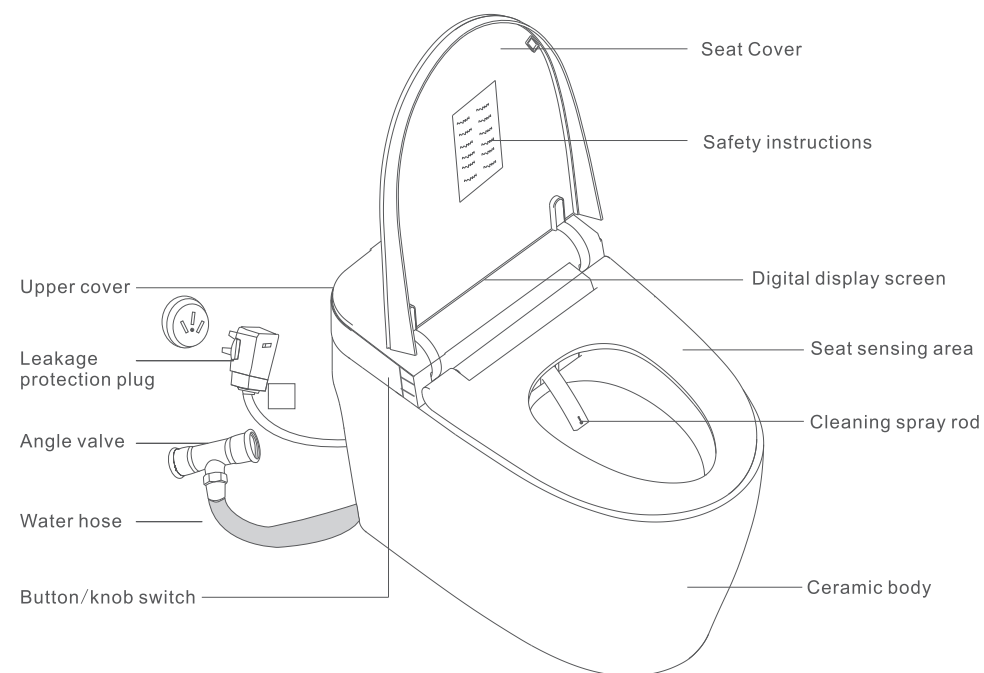

Note: The model 8802 is used as an example. The appearance of other models shall prevail in kind.


Description of digital display

Confirm the items before use

When using the intelligent toilet for the first time, please be sure to confirm the following items

Put the power plug into the socket

1. Insert the power plug into the AC 220-240V socket

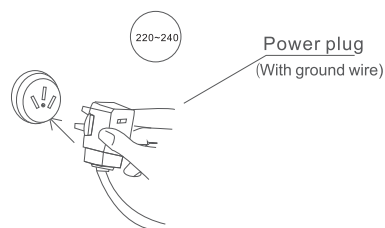


2. Please make sure that the temperature information of digital display screen is on.
3. Make sure the feed valve is open.

Remote control match code operation

After the startup self-check is completed, the motherboard will sound the startup chord ding ding ding. Within 30 seconds after the startup sound, long press the side key (long rotary side knob) of woman wash, the main board will enter the remote control code matching mode with a long sound. At this time, press any key on the remote control and you can hear the buzzer sound response on the main board, which indicates that the code matching is successful.

Leakage protection plug

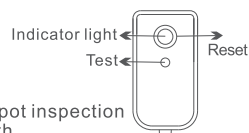

1. Please do spot inspection once a month.
2. Press "Test" button.
3. Make sure the indicator is off.
4. Please confirm that the product has stopped working.
5. If there is no problem with the above, please press the "Reset" button and the product will restart.

Warning

Be sure to firmly connect the ground cable.

The power plug of this product is three-pole plug (with ground wire).


Ensure that water pipes are properly installed; otherwise, water leakage may occur.



Confirm the items before use

Confirm all functions

1. Dry all parts of the water pipe and check the nozzle and water pipe for leakage.
2. Cover the sensor area of the seat ring, check whether the energy saving icon on the digital display is off.
3. Check the buttocks, female, purging, drying functions is working normally or not.

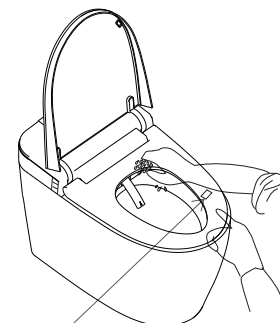

When checking all functions, make sure the seat sensor is covered and the energy saving icon or indicator light is off.

Attention

1. The cleaning and heating is in the immediate heat mode. If the water cannot enter normally, the main functions of the machine cannot work normally.
2. After starting, ensure that the inlet angle valve is open and the inlet hose is not bent.

Warning

Do not use power supply other than 220-240V AC, please wire according to relevant regulations.



* Failure to follow this rule may cause fire *

▣ Microwave radar gear adjustment

Long press the remote control stop button, the motherboard enters the shutdown state, short press the remote control female cleaning button or the side button female cleaning button to adjust the radar gear, the display screen will display the L1-L6 gear value, L1 is to close the microwave induction, L6 has the furthest induction distance.

▣ Flip cover strength gear adjustment

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Short press the remote control water pressure + button, flip strength gear increase; Short press the remote control water pressure - button, flip strength gear decreases; The display screen will display the gear value of C1-C9, with C1 as the minimum and C9 as the maximum.

▣ Flip seat ring strength gear adjustment

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Short press the remote control Nozzle Mast > button, flip strength gear increase; Short press the remote control Nozzle Mast < button, flip strength gear decreases; The display screen will display the gear value of S1-S9, with S1 as the minimum and S9 as the maximum.

▣ Flush gear adjustment

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Press the flushing button of the remote control to adjust the flushing gear. The display screen will display F1-F4, with F1 as the minimum and F4 as the maximum.

Hide feature Settings

▣ Automatic flush switch

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Short press the hip cleaning button of the remote control to set, buzzer one long sound to open the automatic flushing function away from the seat, buzzer one short sound to close the automatic flushing function away from the seat.

▣ Automatic wetting toilet wall when sit

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Short press the Night Lamp button of the remote control to set, buzzer one long sound to open the automatic wetting function, buzzer one short sound to close the automatic wetting function.

▣ Automatic bubble switch when sit

Long press the stop button of the remote control, and the motherboard enters the shutdown state. Short press the Drying button of the remote control to set, buzzer one long sound to open the automatic bubble function, buzzer one short sound to close the automa

Method of use

▣ Water temperature adjustment

Press the Water Temp button to adjust the cycle of high, medium, low and normal temperature.

▣ Seat temperature adjustment

Press the Seat Temp button to adjust the cycle of high, medium, low and normal temperature.

▣ Air temperature adjustment

Press the Air Temp button to adjust the cycle of high, medium, low and normal temperature.

▣ Hip cleaning function

Press Hip Cleaning button, or rotation the side button to hip clean, then the cleaning function is opened.

▣ Female cleaning function

Press Female Cleaning button, or rotation the side button to Female clean, then the cleaning function is opened.

▣ Reciprocating massage

When the hip and female cleaning function is on, press the corresponding button again, and the shower head moves back and forth repeatedly to make the cleaning area larger; Press the corresponding massage button again to stop this function.

▣ Nozzle position movement

To adjust the nozzle position, press the “<” “>” button to adjust the nozzle position to make the cleaning position more suitable for the user.

Method of use

- Water pressure regulating**
 In hip, female cleaning function when open, press Water Pressure "+" "-" key, can make water pressure is strengthened or abate.
- Air dry function**
 Press Drying button to open the air dry function, it will automatically close after 3 minutes.
- Deodorization function**
 After sitting down, the deodorant function automatically opens. Drying while deodorizing does not work, automatically close after 30 seconds delay after leaving the seat.
- Stop**
 Press the "Stop/power" button to stop the cleaning, drying and other functions being performed. Stop/power.
- Nozzle cleaning**
 When you leave your seat, press the "Self-cleaning" button of the remote control, the spray rod extends, and the water from the nozzle can clean the spray rod. The cleaning time is 60 seconds.
- Lighting function**
 Press "Night Lamp" to turn on or turn off the floodlight and knob light.
- Flush function**
 Press "Flush" button to start flushing once; When the human body left after sitting, automatically start flushing once; In the seated position and start any function of hip or female cleaning, after cleaning, an automatic flush is performed.
- Automatically close cover and seat ring**
 When the seat cover is opened and the human body leaves the seat, if there is no movement in the system at this time, the seat cover will be automatically closed without flushing after 90s. If the seat cover and seat ring are opened at the same time, then the seat cover and seat ring will be closed after 180s, and at the same time a flush. If a microwave signal is detected or the system is automatically active during this time, the timeout will be reset.
- Foot sensor**
 The foot sensor function will be shielded and does not respond when sitting. The foot sensor of manual model will only flush when sitting down. The foot sensor of automatic model will flip the lid when the seat cover and seat ring are closed. When the seat cover is opened and the seat ring is closed, the induction will open the seat ring; When the seat cover and seat ring are opened at the same time, the induction will close the cover and ring and conduct a flush.
- Energy saving**
 After the energy-saving function is turned on, no matter which gear is in the current position, the temperature away from the seat is 28 degrees. After sitting down, adjust the seat temperature by setting the target gear.

Use instructions

The yield and temperature of the spray warm water?

The yield of water

Due to the use of instant thermal mode, when cleaning for a long time, the water temperature will not be reduced, there may be some fluctuations, does not affect the use.

Spray water temperature will be controlled according to the previously set temperature


Normal temperature: spray water is not heated

Low grade: about 35°C

Medium grade: about 38°C

High grade: about 41°C

The heating time varies with the temperature of the external water.

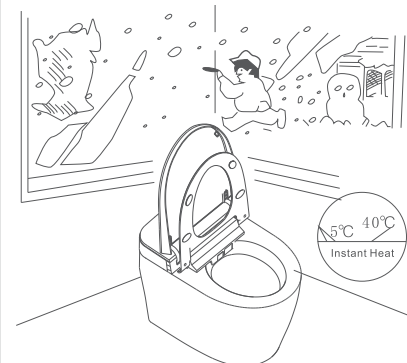

Equipped with seat sensor

Because the installation has a seat sensor, so when there is no seat, even if the wrong operation press the switch, the nozzle will not spray water, the cleaning function is not started.



The seat sensor will not work if the following conditions occur.

※ The human body is not sitting on the seat ring.

Use instructions

Energy saving function


The following measures can save energy effectively

- After use, close the seat cover.
- Seat temperature and water temperature do not blindly set to high - grade.
- Adjust to do not affect the comfort level is better.
- Spring, summer, autumn and winter, please adjust according to the temperature.
- Use devices that save electricity whenever possible.
- Please cut off the power supply when you go out for a long time.

※ When freezing is possible, take anti-freezing measures.


Close seat ring and cover slowly

The smart toilet is equipped with a damping buffer to prevent collisions when the seat is closed.

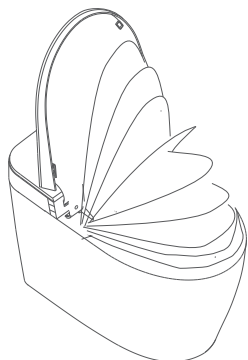

Water coming out from around the nozzle?

Before and after cleaning or when the water cleaning switch is set on, there is water around the nozzle, which is a normal phenomenon in structure, not a fault.

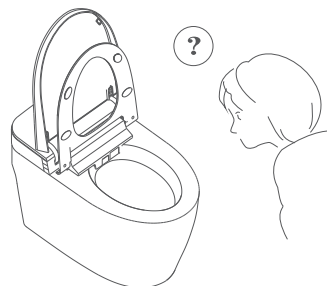

In addition to the above, if the water flow does not stop, please close the inlet valve, pull out the power plug from the socket, and contact the seller.

Daily cleaning and maintenance

Warning


Before cleaning and maintenance, remove the power switch and ensure that the power indicator is off.

The cleaning and maintenance method of intelligent toilet

Please wipe with a soft cloth dipped in water

- If the dirt is not removed in time, it will become difficult to clean, please often wipe with a soft wet cloth. In addition, wipe the product with a wet soft cloth to prevent static electricity, which can trap dust and cause the product to become black and dirty.


※ In addition, the cover can also be removed from the toilet to facilitate cleaning between the toilet and the cover.

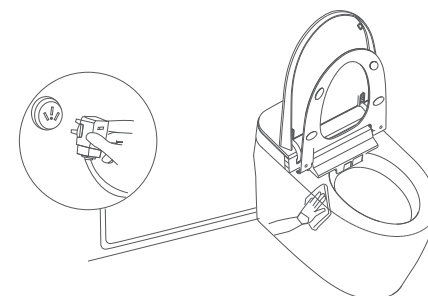

Cleaning and maintenance of sprinkler head

There is dirt in the nozzle, please clean it with a small brush such as toothbrush.

- ※ After leaving the seat, rotate the knob or the corresponding button to extend the nozzle.
- ※ Do not forcibly stretch and bend the nozzle.

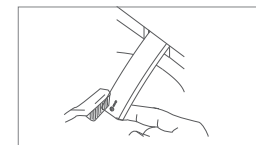

Warning


Remove dust from the power plug periodically. When cleaning, unplug the power plug and wipe with a dry cleaning cloth.

※ Poor insulation may cause a fire.


Remove cover and clean

The disassembly method of the toilet cover

1. Unplug the power plug from the socket.

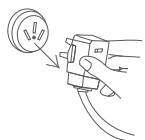


2. Close the feed valve and stop the water supply.

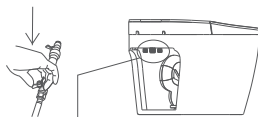


Unscrew the three hoses on the flush valve.

3. Lift the cover up and remove it from the toilet.

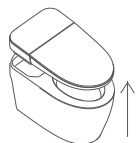

4. Place the cover lightly on the floor cushions.

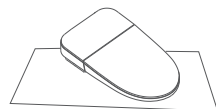

Be careful not to break the nozzle and drying baffle.

1. Be sure to unplug the power plug from the socket.

※ Failure to remove the plug may result in an electric shock hazard.

2. Be sure to drain the water in the product.

※ Water may enter components during moving.

3. Do not squeeze the power cord or water supply pipe.

※ Can cause damage or electric leakage, water leakage.

4. Please handle the cover carefully when removing it for cleaning.


※ It can cause leaks and malfunction.

5. Never turn the cover upside down without removing the power supply, and never place it directly on the ground.

※ Can cause surface scratches or failure.

6. When unscrewing the hose on the flusher valve, mark the installation position of each hose.
After cleaning and installing the hose, ensure that it is not installed incorrectly, and tighten the joint to avoid leakage.

Do not put the cover upside down,
please do not put it on the ground!

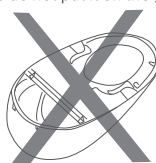

Long-term placement when not in use

Under the following circumstances, please be sure to drain the water.

- Not using a smart toilet for a long time due to travel. (Polluted water can cause blockage.)
- In uninhabited homes, temperatures drop faster than expected and are prone to freezing and leaks.

⚠ Attention

When removing the water supply hose, close the water inlet valve.

When installing water supply hose, ensure that it is properly inserted.

※ Easy to cause water leakage.



Replace the battery of the remote control


When the battery is about to run down, the indicator light of the remote control becomes light or off, and the signal cannot be transmitted.

※ The included battery is mainly used to check the health of the installation, so the service life may be short.

Replace the battery according to the following instructions.
Attention

- The positive and negative terminals of the battery must match the logo on the remote control.
- Can't use mix old and new batteries.

Open the back cover of the battery area of the remote control and replace it with new batteries.

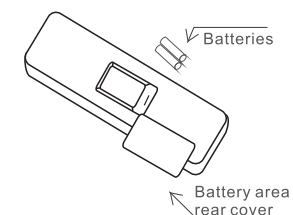

When there is a danger of freezing in winter

In the cold winter months, smart toilets can break and leak when water freezes in the toilet. To prevent freezing, perform the following operations.

General measures to prevent freezing	
1. Please plug into the power socket and switch on the power.	If the water doesn't come out when it freezes In case the water supply hose or connection is frozen and water cannot be sprayed, cover the hose or connection with a cloth soaked in hot water to thaw it, or raise the indoor temperature and let it thaw naturally. Attention Do not pour hot water or blow hot air over the hose. ※ The water supply hose may be damaged.
2. Switch the water temp switch and the seat temp switch to [high], and close the seat cover.	
3. Turn on the heating indoor. • If there is no heating in the room, drain water from the water supply hose as follows. a. Close the feed valve and stop the water supply. b. Use the remote control to set the cleaning water temperature at room temperature. Touch the seat sensor with your hand and open the Hip Cleaning function, until there's no more water coming out of the nozzle.	

Attention

When removing the water supply hose, close the water inlet valve.
When installing water supply hose, ensure that it is properly inserted.



Fault judgment

If you think there is a fault, some of which can be removed by simple operation, please confirm the following before commissioning the repair.

Malfunction	Reason	Exclusion Methods
Nozzle no water	The power socket is not energized	Confirm power failure
	The power switch is off	Press the power switch to light up the power lamp of the display part
	The power plug is not inserted into the socket	Plug in the power supply
	Appear electric leakage	Please unplug the power supply and entrust a repair
	The feed valve is closed	Open feed valve
	There are impurities in the filter of flushing valve	Clean the filter
	The water inlet pipe is blocked due to twists and turns	Straighten the water pipe
	Out of range of the seat sensor	Adjust your seat position
	Nozzle blockage	Clean the nozzle
	Water pressure is too low	Increase the water potential intensity, or start the air pump pressurization
Water not warm	Water temp is not set at proper temp	Press the water temp key to adjust to the appropriate temperature
	The incoming water temp is too low	After cleaning for some time, check again
Seat ring not warm	Seat temp is not set at proper temp	Press the seat temp key to adjust to the appropriate temperature

If the above confirmation still fails to rectify the fault immediately, please contact the dealer who sold the product or the company's after-sales service.

Product specification

Category			Specification
The rated voltage			Ac 220-240V / 50Hz
Power			1200W (Max.)
Cleaning Function	Water yield	Hip clean	400-800 ml/min
		Female clean	400-800 ml/min
		Purge clean	400-700 ml/min
	Water Temp		Room temp, 34°C, 37°C, 40°C (4 grades)
	Water Pressure		3 Modes adjustable
	Heating time		5 seconds (there may be some differences due to different inlet water temp)
	Heater power		1200W (Max.)
	Safety device		Flow sensor, inlet and outlet water temperature sensor, temperature control switch, relay
	Countercurrent preventer		One-way valve
	Air dry function	Air temp	
Blowing rate		≥0.2m³/min	
Heating power		200W/250W	
Safety device		Temp sensitive switch, temp fuse wire	
Warm seat ring	Seat ring temp		Room temp, 34°C, 37°C, 40°C (4 grades)
	Heating power		40W
	Safety device		Temp sensor, temp fuse wire
Moving cleaning			Move the nozzle back and forth by 1.5cm
Massage cleaning			Strong and weak spaced vortex bubbles
Nozzle position			Before and after are adjustable
Water supply pressure			0.7-7.5khf/c㎡ (0.07-0.75Mpa)